


Anson - Deluxe Executive Desk

ANS-DED




ASSEMBLY INSTRUCTIONS


Anson
Rectangular Desk

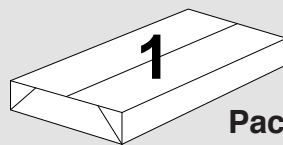


Pack 1:
Top Pack

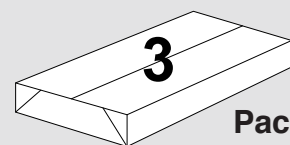


Pack 3:
Corner Kit

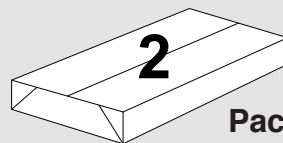


Pack 2:
Rail Kit

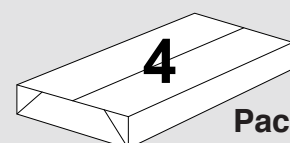


Pack 4:
1000 Leg
Kit

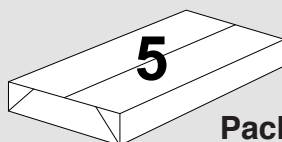

Pack 5:
600 Leg Kit

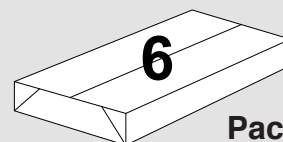


Pack 6:
Modesty Kit


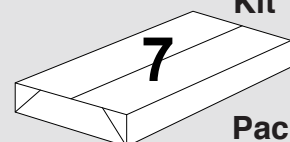


Pack 7:
Modesty
Pack



TOOLS REQUIRED
FOR ASSEMBLY

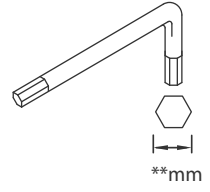


DONT STRUGGLE
2 MAN LIFT

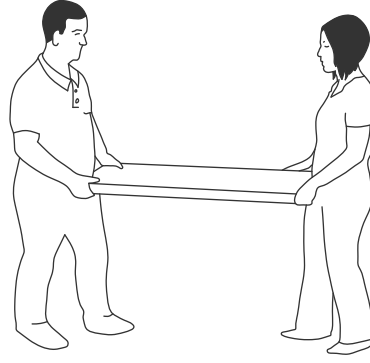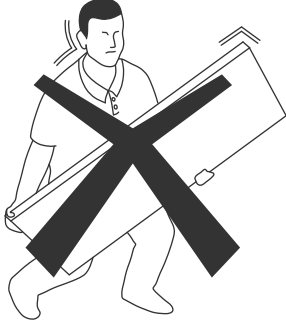


ALWAYS HANDLE
ITEMS WITH CARE

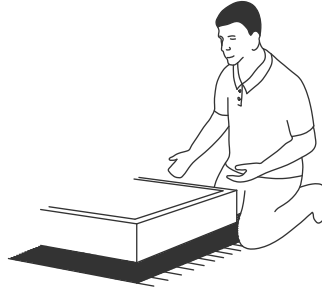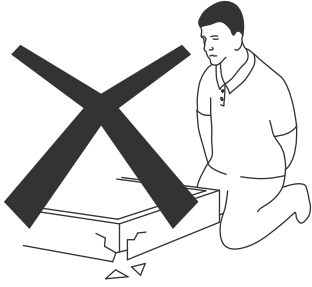

IF UNSURE CALL
FOR ASSISTANCE

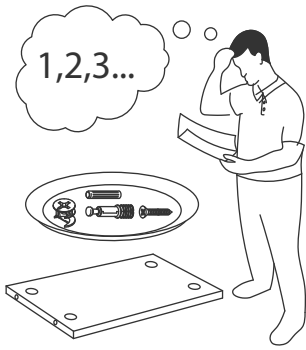


KEEP FITTINGS AWAY
FROM CHILDREN

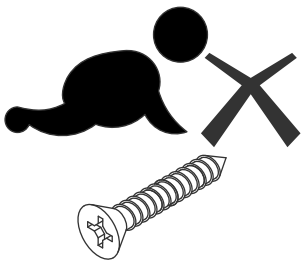




Please check that you have all the panels


ANS-EXEC-TOP

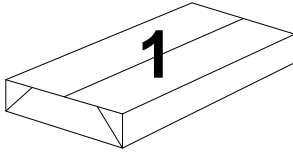

PACK 1:
1 x Top Panel

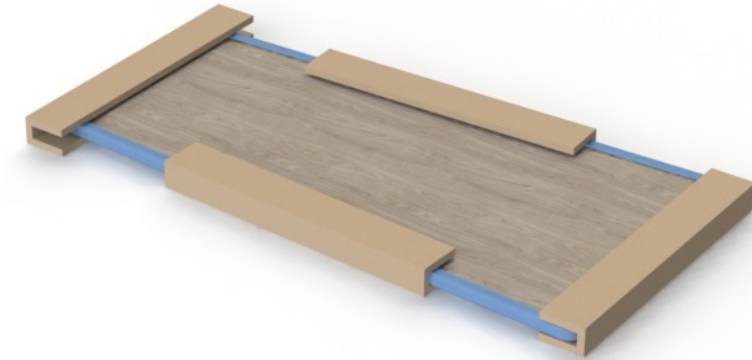


HN-RAIL-2200

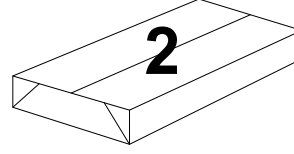

PACK 2:
1 x Rail Kit




HN-CAST

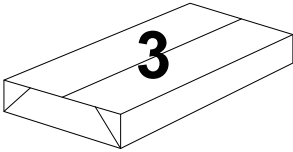

PACK 3:
1 x Corner Kit




HN-LEG10-KIT

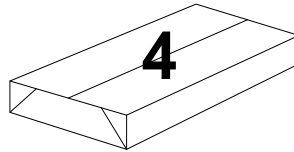

PACK 4:
1 x 1000 Leg Kit




HN-LEG6-KIT

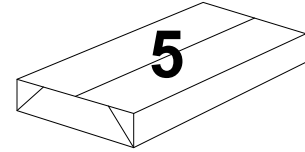


PACK 5:
1 x 600 Leg Kit




HN-MBKT-KIT

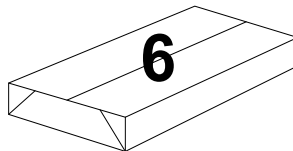


PACK 6:
1 x Modesty Kit

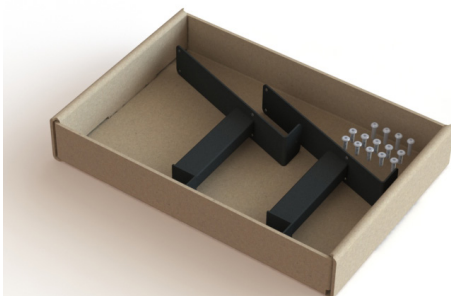

ANS-EXEC-DMOD

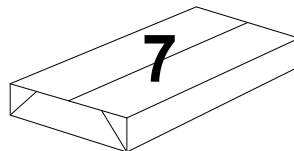

PACK 7:
1 x Modesty Panel

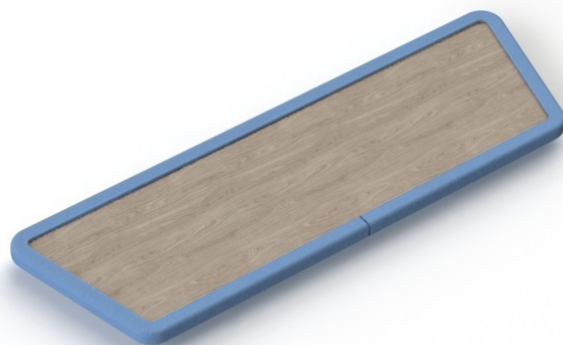



Please check that you have all the fittings

FITTINGS SUPPLIED



M6 Connector Bolt

Size
25mm

PCS
58



Adjustable Foot

Size
25mm dia.

PCS
4


1

ANSON DELUXE DESK ASSEMBLY

Step 1

Unpack your Anson rectangular desk and please recycle all packaging.

Place the top face down so that the fixing holes are face-up.

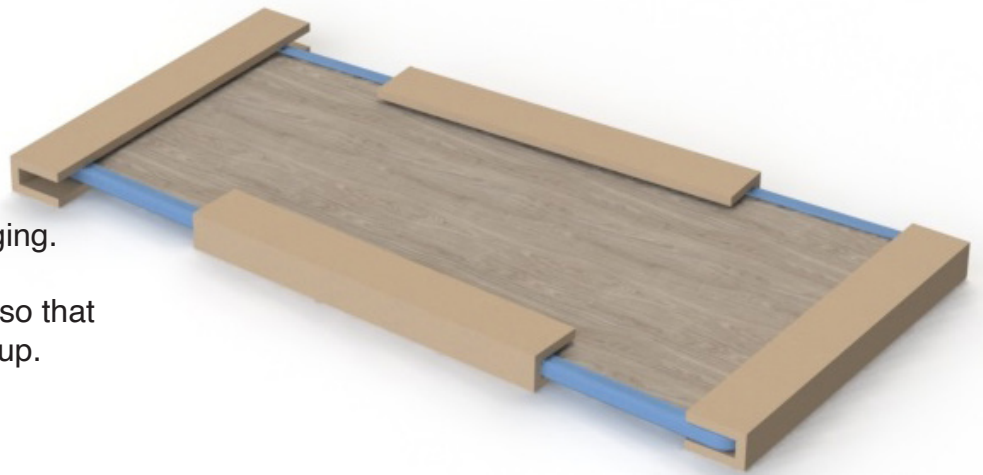

2

image 'a'.

image 'b'.

Step 2

Assemble the legs as per 'image a' using parts from both leg kit & corner kit.

Link all the legs together attaching them to the side rail as per 'image b'



ANSON DELUXE DESK ASSEMBLY

3

Step 3

Link both the end legs together attaching them with the rail kit as per image

Ensure all fixing bolts are tightened turning in a clockwise position.



4

Step 4


Once the frame is assembled place on the underside of the top and affix using the 16x M6 bolts as shown.



5

Step 5

Attach the modesty panel fixing brackets by hooking onto the cross rail and affix using the 4x M6 bolts as shown.


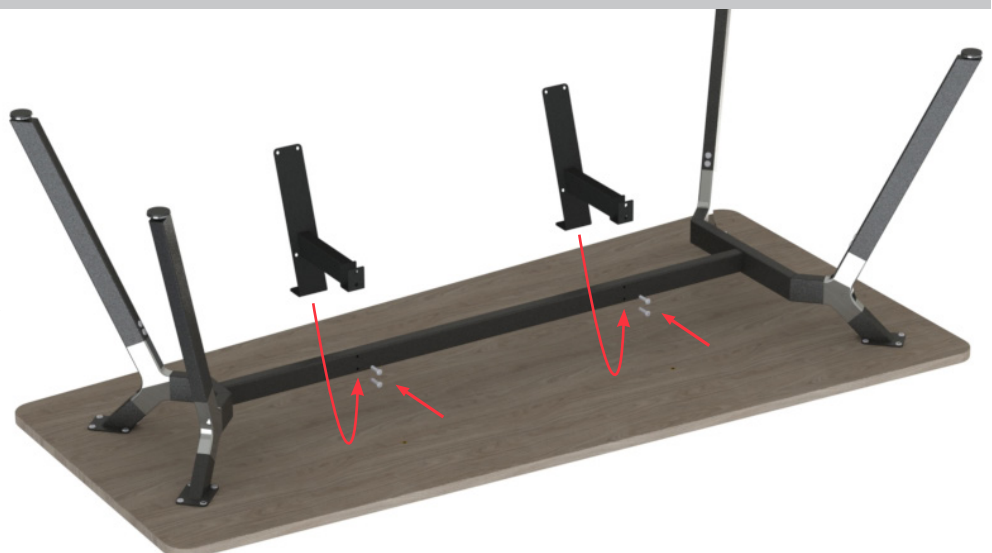


ANSON DELUXE DESK ASSEMBLY

6

Step 6

Fix the modesty brackets to the underside of the top and affix using the 2x M6 bolts.

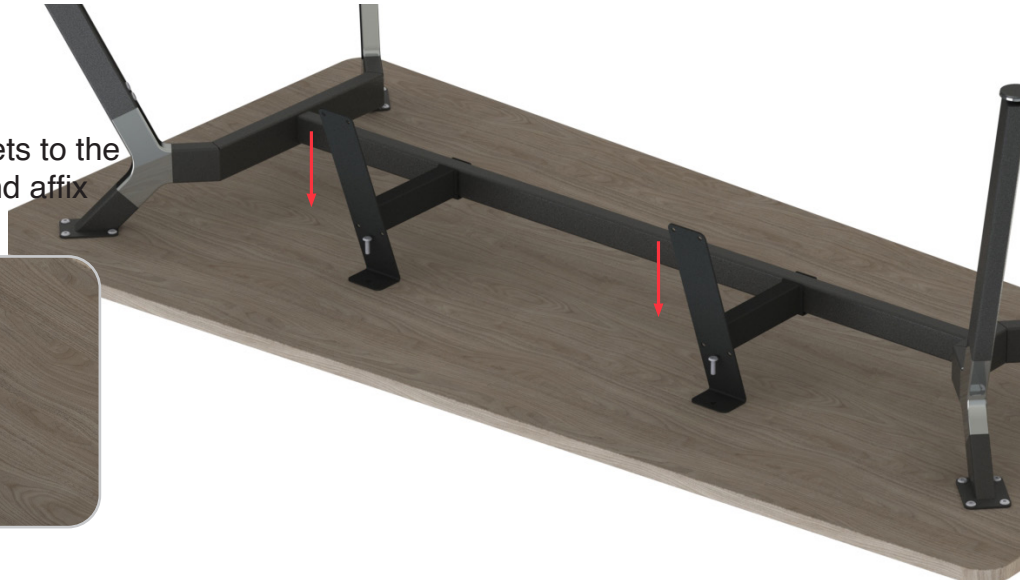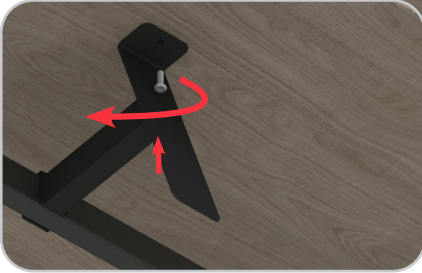

7

Step 7

Align the modesty panel to the modesty panel brackets and affix using the 8x M6 bolts as shown.



8

Step 8

Once complete ensure all fixings bolts are tightened, and with 2x person(s) lift and turnover the desk into it's upright position.

